



KERCHAN
Professional Innovation

| For better shopping experience



K-Smart




Operating Procedure Manual

Kerchan Technology Co., Ltd

KA series



Indexes

01	 Install Software	2-3
02	 Configure K-Smart to start automatically on boot	3-5
03	 Update / upload videos into screen	6





Note:

The following operational steps must be performed on a Windows computer; they cannot be executed on a MacBook. Otherwise, uncertainties may arise, leading to potential failures.

01 Install Software

Step 1: Download the K-Smart software package from our official website or we send you by Email.

Step 2: Save the software package in your USB or SD card. (Please ensure that your SD card or USB is 2.0 compliant.)

 
-  K-Smart_DEFAULT_RK3288_V3.0.0_20200806sign.apk
-  MediaPlayer_DEFAULT_V2.0.1_20221216sign.apk

 
Step 3: Insert the SD card or USB containing the K-Smart software package into the screen's port.

Step 4: Locate the K-Smart software package in the file directory on the LCD screen.

Step 5: Click the software icon to commence the installation.

Step 6: Launch K-Smart by double-clicking the desktop icon or finding it in the Start menu.

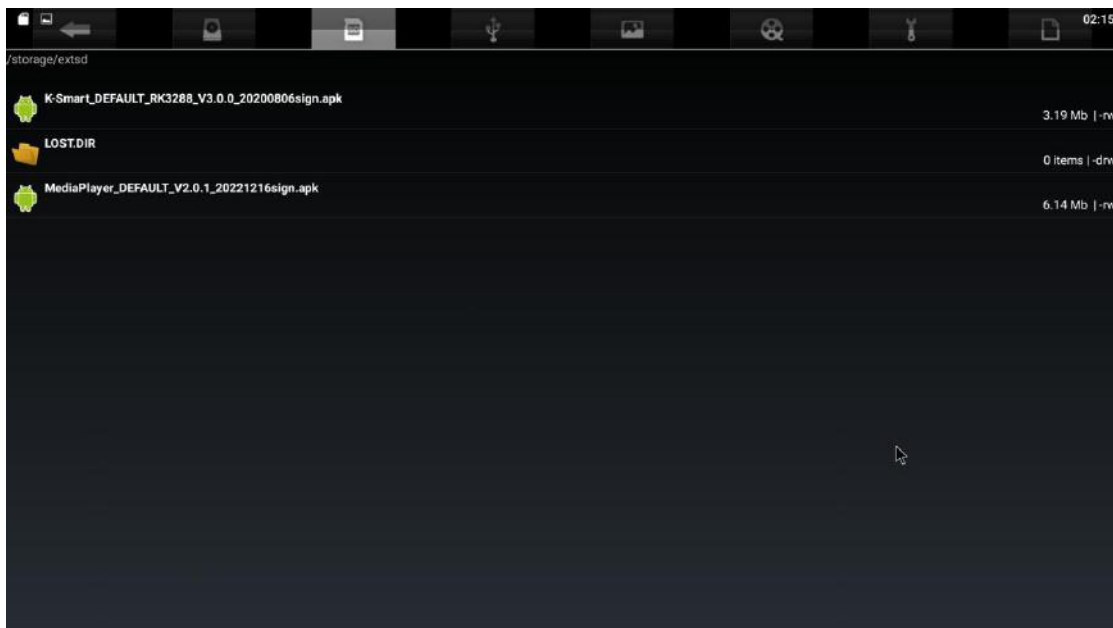

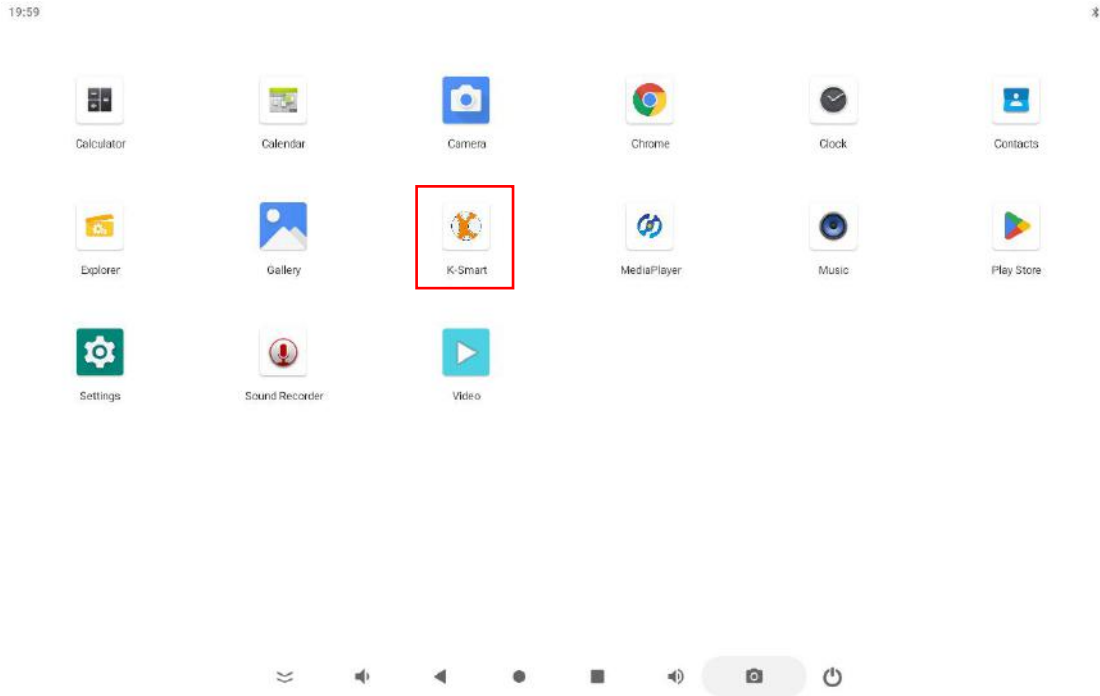


02

Configure K-Smart to start automatically on boot.

Step 1: Power on the screen;




Step 2: Find the “K-Smart” icon from the screen Homepage;

 Step 3: Click the K-Smart icon, enter into this interface as below, choose the Media Player:

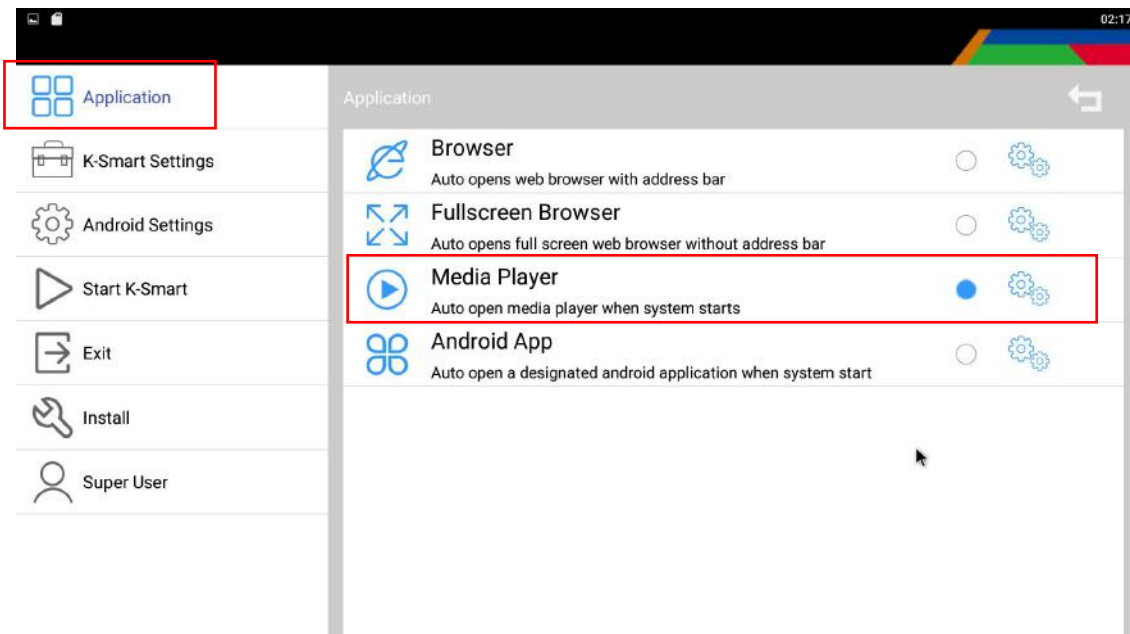




   Step 4: Click the Android Settings—App&Notification—Advanced—home app—Default App—select the K-Smart as the start app.

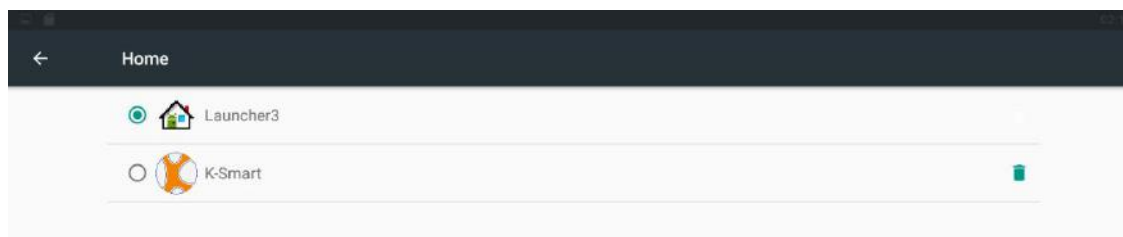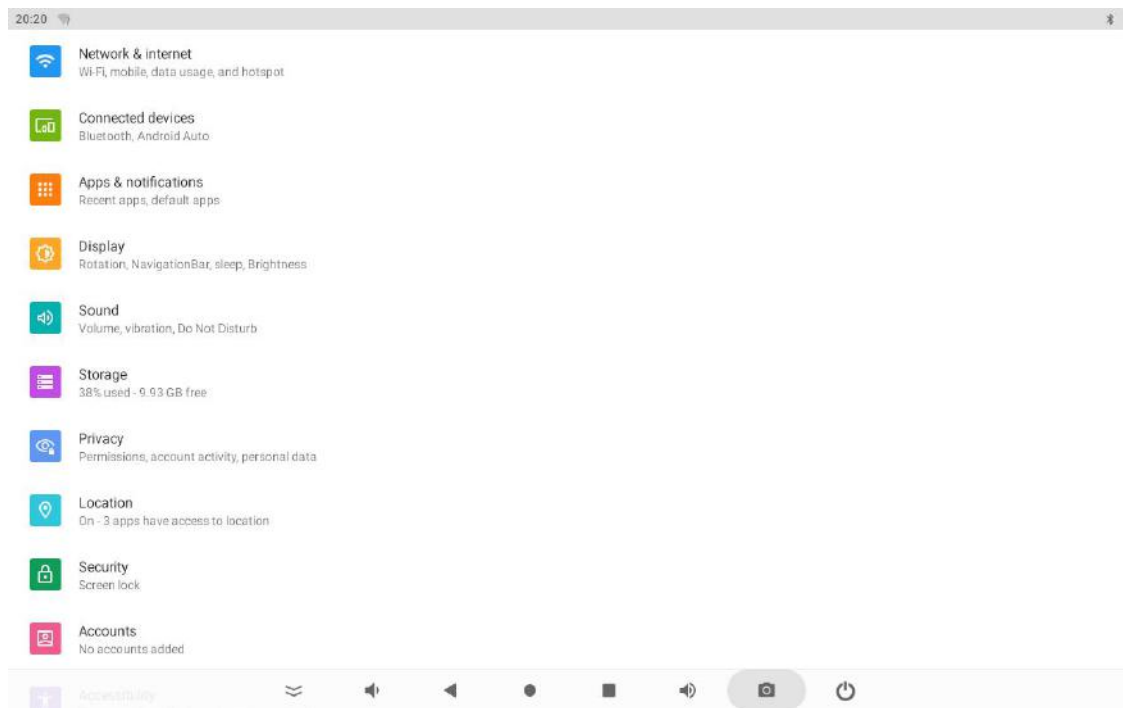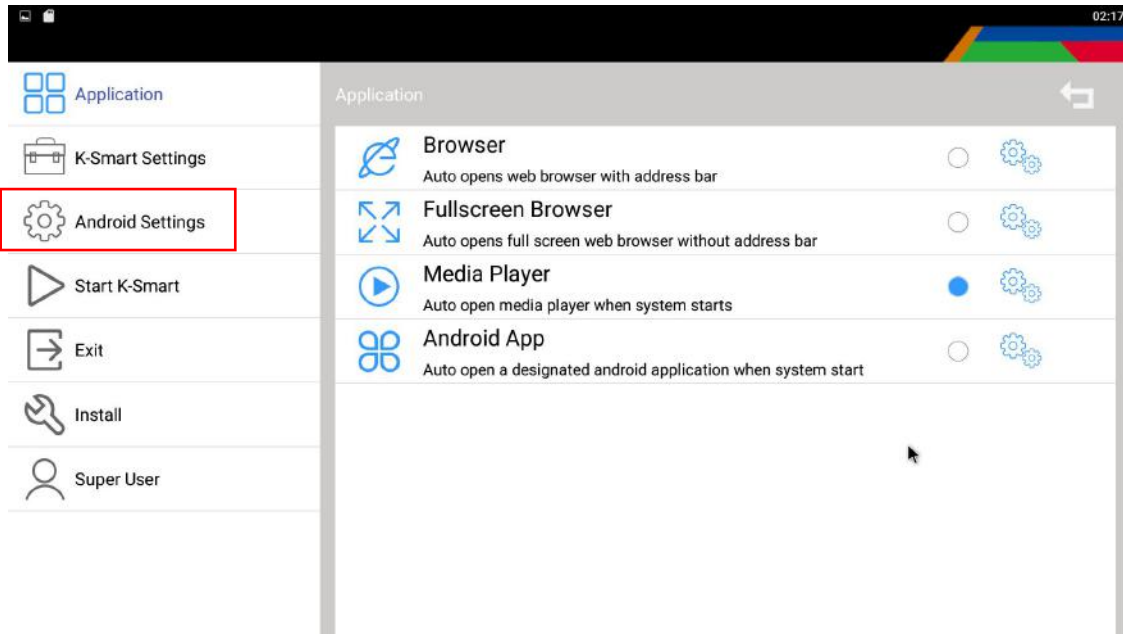




 Step 5: Back to the K-Smart homepage to start the K-Smart .

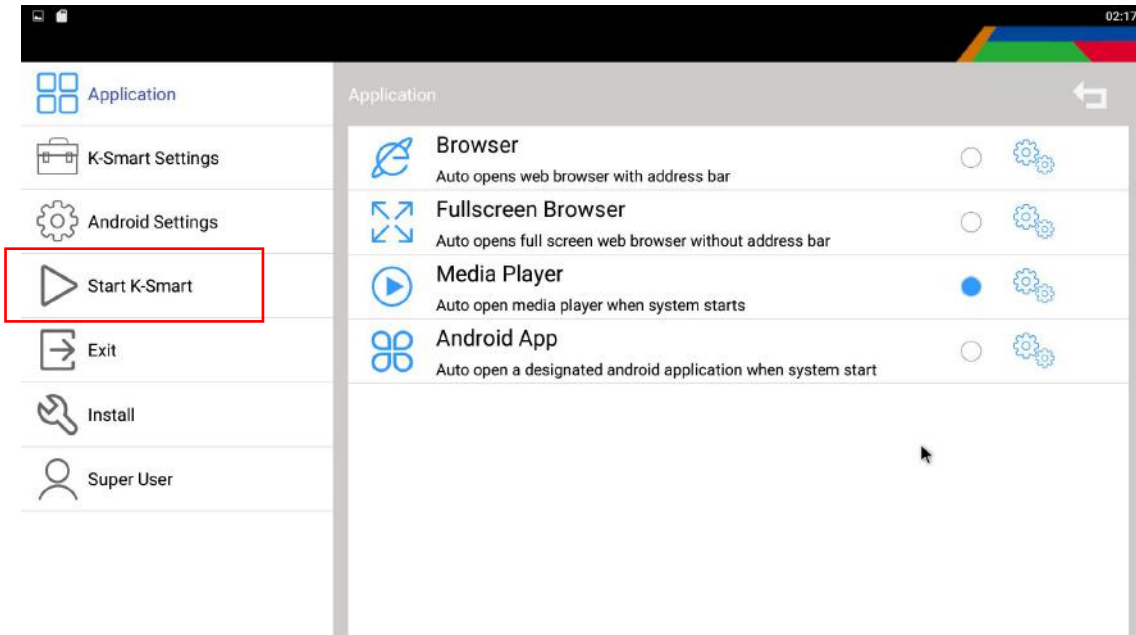

 Step 6: When you see the screen says “There is no video file in the USB disk or SD card”

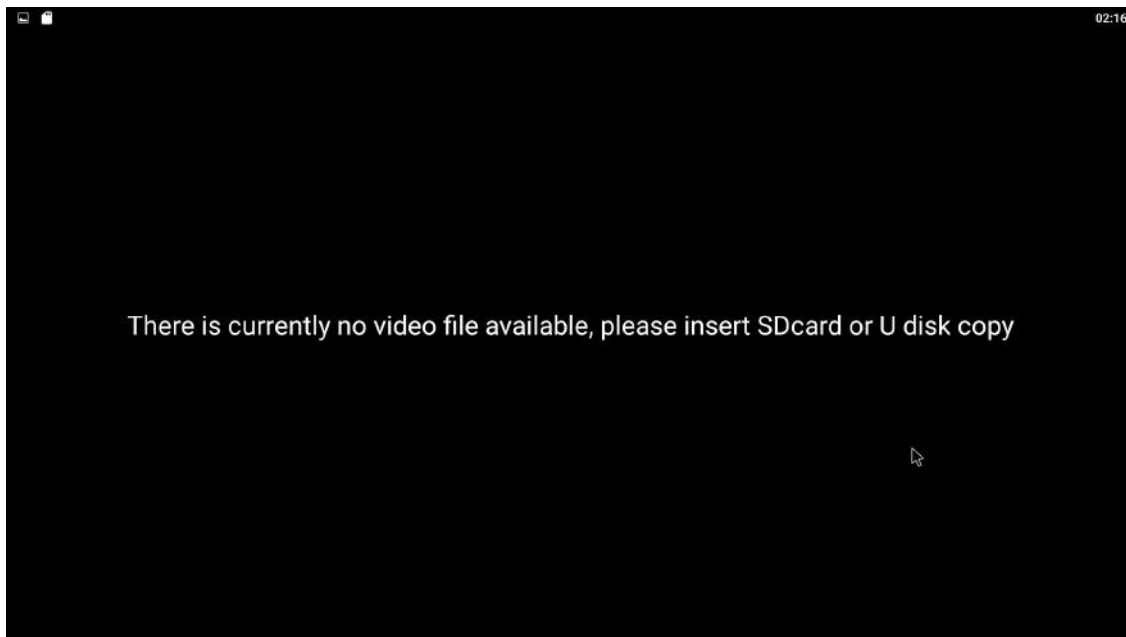

Note:

 
Following Part 1 and Part 2, if the screen displays "No video files found on the USB disk or SD card," proceed to Part 3 to upload or update videos onto the screens.




03

Update / upload videos into screen

Step 1: On your Windows PC (not MacBook), create a folder named "adplayer."

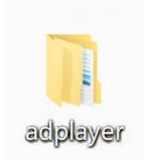

 Step 2: Open the "adplayer" folder and create a subfolder named "0."

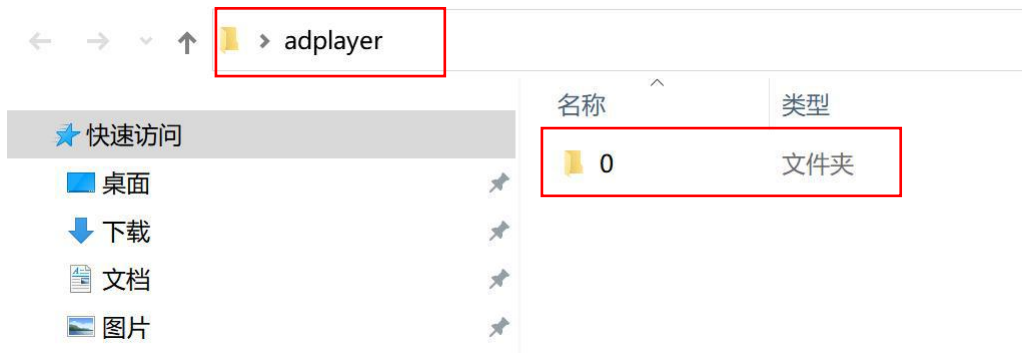

Step 3: Place your videos in the "0" folder. Ensure that the video resolution is 1920*1080, and the video formats are MOV and MP4.



Step 4: Save the "adplayer" folder onto your USB or memory card.

Step 5: Insert your USB or memory card into the screen; your new videos will automatically be saved to the screen's internal memory, replacing the old video contents. The new videos will play in a loop.

Step 6: Remove the USB or memory card from the screen.